



# ASSEMBLY INSTRUCTIONS

## SOCKETLESS™ Racing Hose

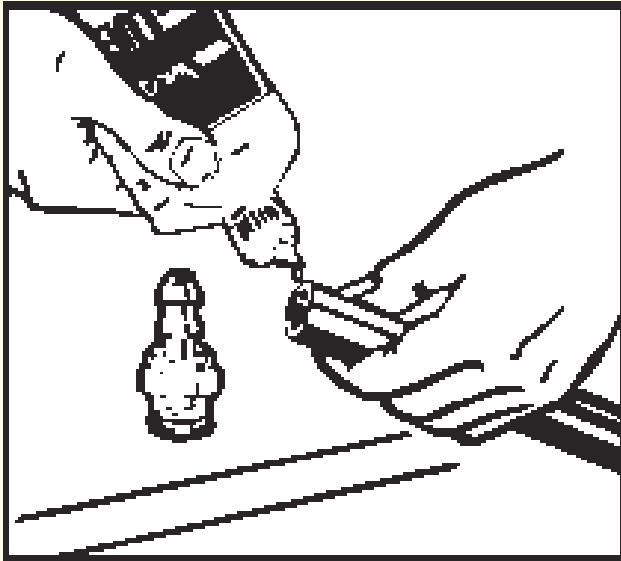

**Step 1.** Cut hose to required length with a sharp knife. Oil inside of hose and outside of nipple liberally.

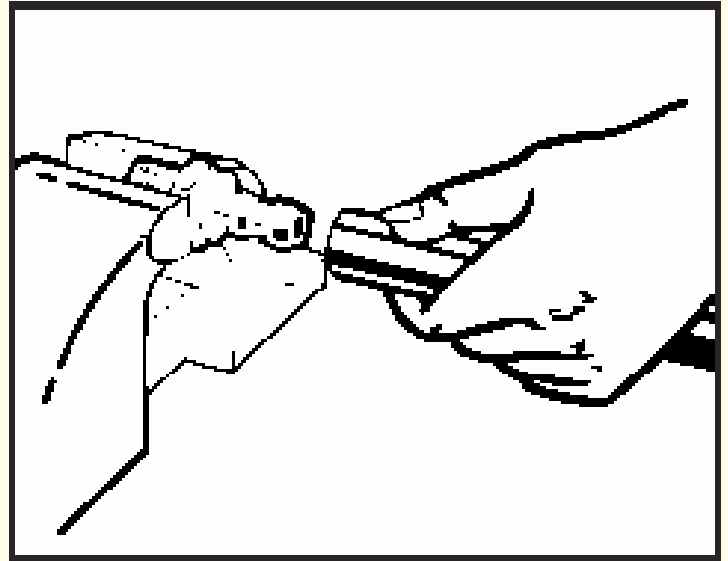

**Step 2.** Push hose on fitting until hose end bottoms underneath protective cap as shown. Clean, proof test to twice operating pressure and inspect all assemblies.

<sup>1</sup>Never use a hose clamp with FBV *SOCKETLESS*.™